

# Bachmann N GE Dash 8-40CW

with **Econami™** SoundValue™



## Default Values

Item No.	Description
67351	N GE Dash 8-40CW, Union Pacific #9363
67352	N GE Dash 8-40CW, Santa Fe #879
67353	N GE Dash 8-40CW, CSX #7369 (HTM®)
67354	N GE Dash 8-40CW, Norfolk Southern #8379 (Thoroughbred)
67355	N GE Dash 8-40CW, Canadian National #2162

CV 120 Airhorns	Value	CV 120 Airhorn	Value	CV 120 Airhorns	Value
Nathan K5LA	0	Nathan M3	6	Leslie A125	12
Nathan K5LLA	1	Wabco E2	7	Leslie A125/200 Combo	13
Nathan K5HL	2	Wabco A2	8	Leslie S3L	14
Nathan P5	3	Holden M3H	9	Leslie S2M	15
Nathan P3	4	Holden K5H	10		
Nathan M5	5	Leslie A200	11		

CV 122 Bells	Value	CV 122 Bells	Value	CV 122 Bells	Value
EMD	0-4	ALCO	10-14	Brass	20-24
GE	5-9 (6 default)	Electronic	15-19	Heavy Brass	25-26

CV 123 Prime Movers	Value	CV 123 Prime Movers	Value	CV 120 Airhorn	Value
EMD 567 Non-Turbo	0	EMD 710 Turbo	2	ALCO 244	4
EMD 645 Turbo	1	GE FDL-16	3		

## Default Function Assignments

F0	Headlight/Backup Light	F3	Short Airhorn	F6	RPM-	F9	Grade-Crossing Signal	F14	Switching Mode
F1	Bell	F4	Dynamic Brake	F7	Dimmer	F11	Brake Squeal/Release	F23	"All Aboard!"/ Coach Doors
F2	Airhorn	F5	RPM+	F8	Mute	F13	Couple/Uncouple		

## Default Volume Settings

CV	Sound Effect	Volume	CV	Sound Effect	Volume	CV	Sound Effect	Volume
128	Master Volume	192	133	Dynamic Brake	125	143	Poppet Valve	25
129	Airhorn	110	134	Radiator Fan	75	148	Emergency Stop	70
130	Bell	125	137	Coupler	128	149	Glad Hand Release	150
131	Prime Mover	150	139	Brake Squeal	100	150	"All Aboard"/Coach Doors	192
132	Air Compressor	100	140	Brake Release	70			

## Configuration Variable Default Values

CV	Description	Value	CV	Description	Value	CV	Description	Value
29	Configuration Data 1	6	106	User Identifier 2	5	218	Analog Mode Motor Start Volt.	35
49	Headlight Config. (Auto-Dim Rev)	145	124	Air Compressor Select, GE "Whooping" (motor driven)	1	1.259	FX3 Function Mapping	255
50	Backup Light Config. (Auto-Dim Fwd)	144				1.260	FX4 Function Mapping	255
57	Forward Direction Enable	255	194	Auto-Bell On Time	6	1.261	FX5 Function Mapping	255
58	Reverse Direction Enable	255	197	Analog Mode Auto-Sound Enable	2	1.262	FX6 Function Mapping	255
105	User Identifier 1	1	216	Motor Speed Step Deadband	2			

If a CV or a sound selection is not listed within this documentation, the default value or selection choices match those of aftermarket SoundTraxx products. For more information about unlisted items, please refer to the Econami product documentation found on our website.